


HealthSpec BioCrobe-CS General-Use Fast-Track Antimicrobial Coating System

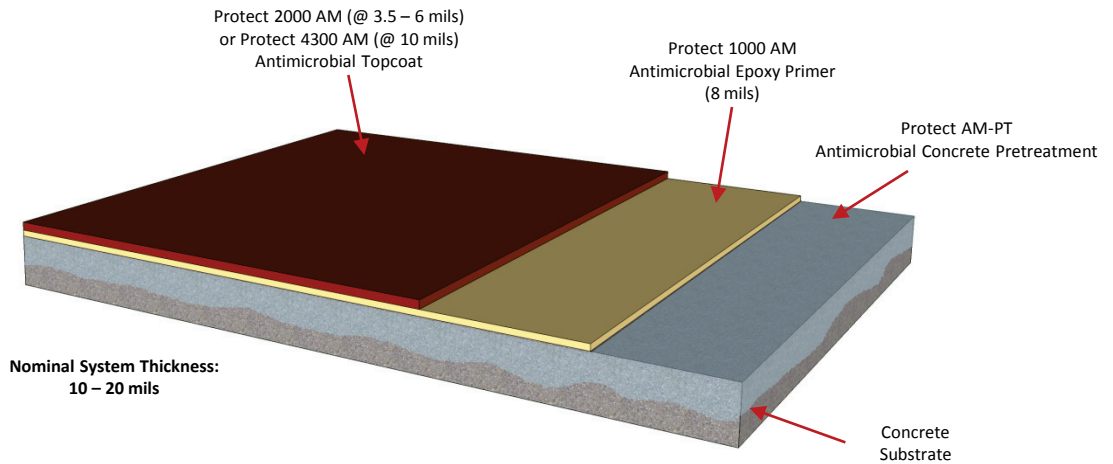

System Description:

A general purpose antimicrobial system consisting of a deep-substrate penetrating antimicrobial concrete pretreatment followed by an antimicrobial epoxy primer. The system is then top-coated with a high-speed, non-yellowing, high-performance antimicrobial topcoat. This system exhibits excellent chemical, wear and abrasion resistance and is suited for healthcare areas requiring antimicrobial protection combined with quick turnaround.

System Advantages:

- Redundant antimicrobial protection throughout entire system and into substrate
- Variety of surface finishes (smooth gloss, satin, textured)
- Excellent chemical resistance
- USDA compliant/CFIA approved
- Excellent wear characteristics
- Available in variety of colors

System Installation Overview:

1. Dampen concrete substrate prior to applying Protect AM-PT
2. Spray-apply Protect AM-PT in two passes and allow to fully purge concrete
3. Apply Protect 1000 AM antimicrobial epoxy primer and allow to cure
4. Apply Protect 2000 AM or 4300 AM antimicrobial topcoat and allow to cure